

- 1 x 18W TC-DE 160Ø  
2038711 2038731
- 1 x 26W TC-DE 160Ø  
2038713 2038733
- 2 x 13W TC-DE 160Ø  
2038715 2038735

 
---

- 1 x 32W TC-TE 185Ø  
2038717 2038737
- 2 x 18W TC-TE 185Ø  
2038720 2038740
- 2 x 26W TC-TE 185Ø  
2038722 2038742


---

- 2 x 26W TC-TE or TC-DE  
2 x 32W TC-TE 215Ø  
2038684 2038704  
2038724 2038744
- 1 x 42W TC-TE 215Ø  
2038728 2038748
- \*2 x 42W TC-TE 215Ø  
2038686 2038706  
2038726 2038746

**Disconnect from mains supply before replacing the fuse or the lamp.**  
 Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.  
**Débrancher le secteur avant de remplacer le fusible ou l'ampoule.**  
 Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.  
**Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.**  
 Koppla bort spänningen före byte av en säkring eller en lampa.















**Switch Off**  
 Abschalten  
**Couper le conector**  
 Desconectar  
**Uitschakelen**  
 Stäng av

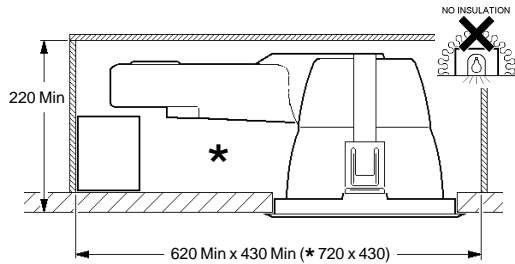

**IMPORTANT NOTE**

When using TC-T lamps, install in still air voids only!  
**WICHTIGER HINWEIS**  
 Bei Verwendung von TC-T Lampen, auf genügende Durchlüftung achten!  
**IMPORTANT**  
 Utiliser les lampes TC-T dans un environnement avec température stable  
**IMPORTANTE**  
 Cuando utilice lámparas TC-T instatar sólo en espacios ventilados.  
**LET OP**  
 Gebruik TC-T lampen slechts in TOCHTVRIJE ruimten.  
**VIKTIG INFORMATION**  
 Bör ej användas vid installation i ventilerade undertak

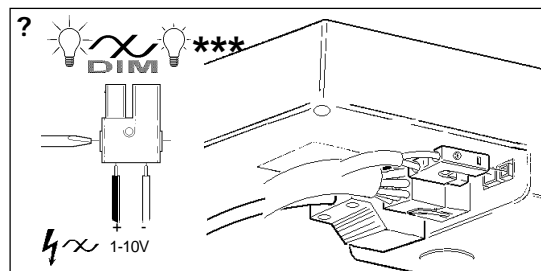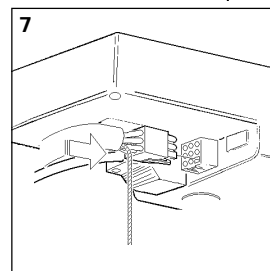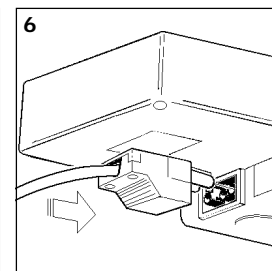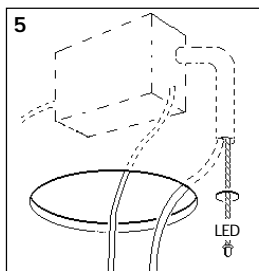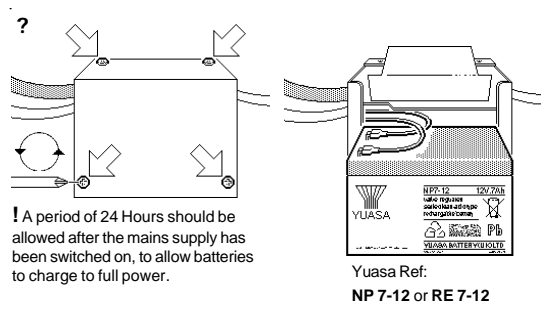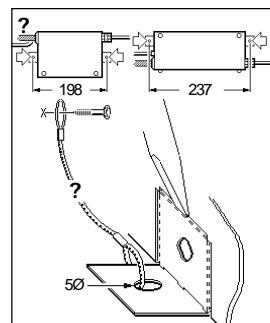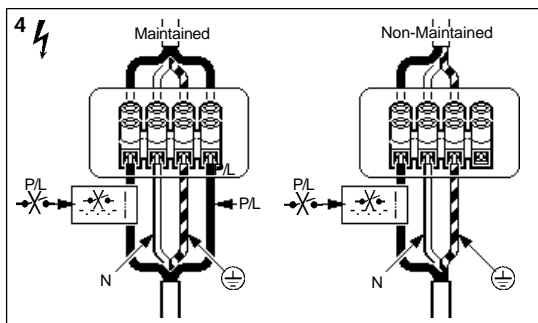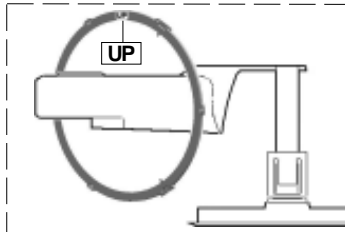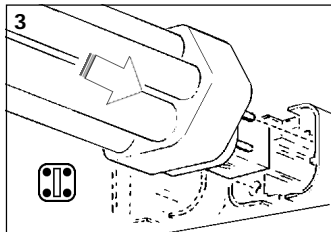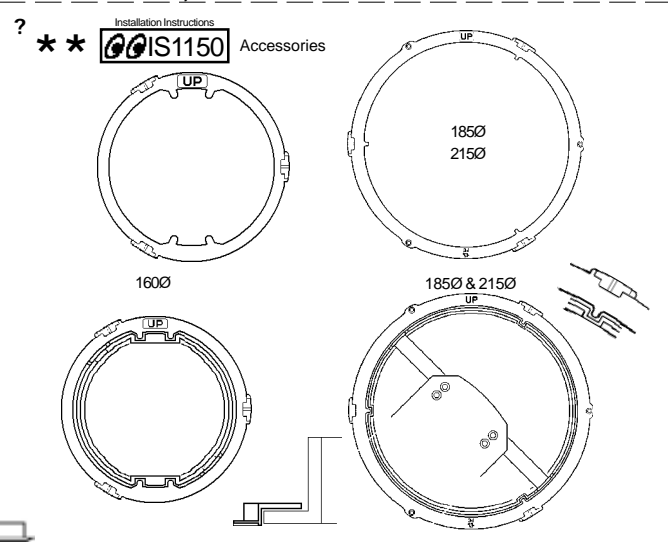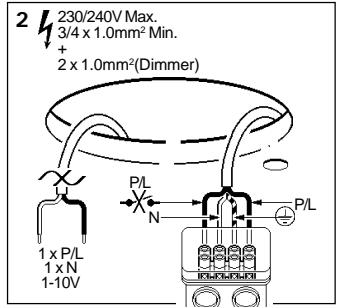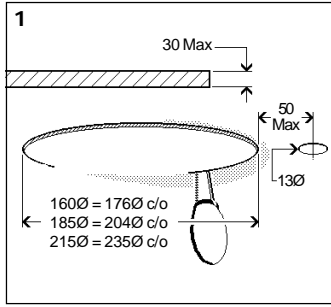

**13/18/26W**  
 YUASA NP2.3-12  
 12V,2.3Ah SLA  
**32/42W**  
 YUASA NP7-12  
 12V,7.0Ah SLA

**I = 24Hrs**


(A period of 24 Hours must be allowed for the charging of the emergency batteries on max voltage.)

**Initial Testing**








1.) Switch on the mains supply and check that the charge indicator lamp (LED) is ON - Leave the luminaire on continuous charge for 24hours. Simulate mains supply failure, and check that the emergency lamp operates for 3 hours. If a full duration of 3 hours is NOT achieved, repeat the charge/discharge cycle, as the battery packs may have been discharged in storage and will require conditioning!

2.) **DO NOT SWITCH OFF THE LUMINAIRES UNSWITCHED SUPPLY AFTER INSTALLATION**, as the unswitched supply **MUST** be maintained. If an interruption to the supply is unavoidable, the batteries **MUST** be disconnected or damage to the battery and/or the lamp may be incurred.

**\*\* ATTENTION**  
 Fit Accessory Ring to luminaire, **ONLY** if an LED100 & LED150 'Architectural' accessory is to be fitted.  
**ACHTUNG**  
 Bei Verwendung von 'architectural' Abschlussmitteln muss der Zubehörring vor der Leuchtenmontage ans Leuchtgehäuse angebracht werden.  
**ATTENTION**  
 Lors l'utilisation d'un anneau de finition 'architectural', la bride d'accessoire doit être fixée au boîtier avant le montage du luminaire.  
**ATENCIÓN**  
 Poner el aro en la luminaria, solo si se va a figar un accesorio decorativo.  
**ATTENTIE**  
 Monteer de accessoirerand op het armatuur, **ALEEN** indien een 'architectural' accessoire gemonteerd dient te worden.  
**OBSERVERA**  
 Montera tillbehörseringen på armaturen, **ENDAST** om något tillbehör skall monteras på armaturen.

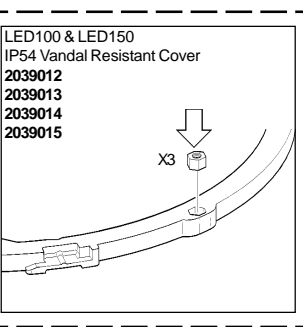

\* OPTIONAL if DSI/Switch Dim is required  
 NOTE: The Switch Dim control switch **MUST** be momentary action push button, a continuous make toggle switch must **NOT** be used!

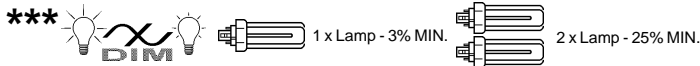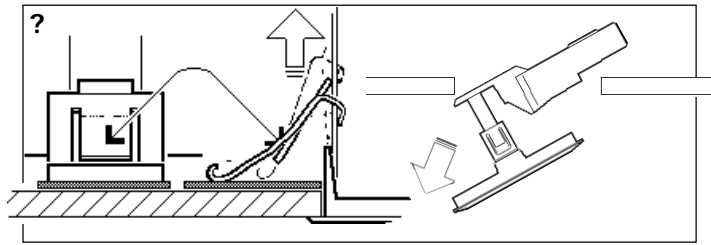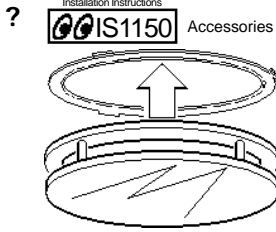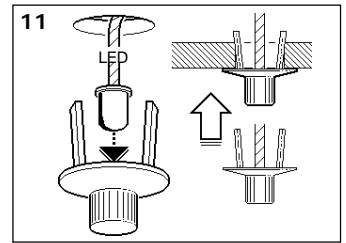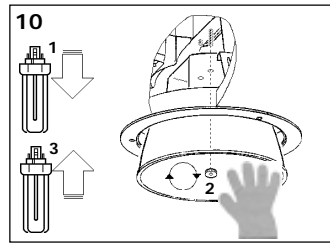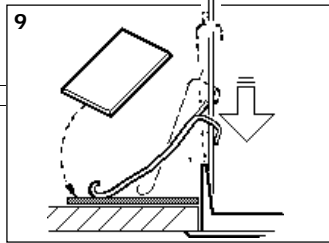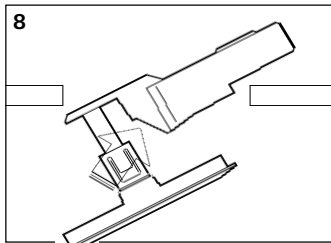

**Routine Maintenance**

Routine maintenance must be carried out in compliance with the requirements of BS5266:Part 1 - Emergency Lighting of Premises.

The following tests assume a three-hour system.

- Daily:**
1. Check that any recorded faults have been rectified.
  2. Check that the maintained emergency lamp is operative.
  3. Check that the charge indicator light is illuminated.
- Monthly:**  
(Functional)
1. Simulate a mains failure and check that the emergency lamp illuminates and remains on for several minutes.
  2. After reverting back to mains supply check the charge indicator light is illuminated.
- Six Monthly:**  
(1 Hour)
1. Simulate a mains failure and check that the emergency lamp illuminates and remains on for one hour.
  2. After reverting back to mains supply check the charge indicator light is illuminated.
  3. On restoring the mains supply the unit will require approximately 24 hours to recharge before becoming fully operational.
- Three Years:**  
(3 Hours)
1. Simulate a mains failure and check that the emergency lamp illuminates and remains on for at least 3 hours.
  2. After reverting back to mains supply check the charge indicator light is illuminated.
  3. On restoring the mains supply the unit will require approximately 24 hours to recharge before becoming fully operational.

It is recommended that the battery packs and lamps are replaced every 4 years or sooner if the units performance fails to meet the above requirements. To maintain optimum unit performance, only approved replacement battery packs and lamps must be used.

All routine maintenance checks must be recorded on the unit Routine Test Record and must be made available for inspection at all times.

**Installation and Commissioning Record**

Luminaire Model Ref: .....	Location: .....
Installed By: .....	Date: .....
Commissioned by: .....	Date: .....
(Full Charge and Discharge Cycle)	

**Routine Test Record**

Monthly Test	First Year		Second Year		Third Year		Forth Year		Fifth Year	
	Signed	Dated	Signed	Dated	Signed	Dated	Signed	Dated	Signed	Dated
Functional										
Functional										
Functional										
Functional										
Functional										
1 Hour Duration										
Functional										
Functional										
Functional										
Functional										
Functional										
1 Hour Duration										
3 Hour Duration										

**Suitable for use indoors**

Geeignet für Innenanwendung  
**Pour un usage interne**  
 Adecuada para uso en interiores  
 Geschikt voor gebruik binnen  
 Lämpligt för inomhusbruk



**Replace any cracked protective shield.**  
 Dieses symbol bedeutet, dass defekte Schutzgläser sofort ersetzt werden müssen.  
**Ce symbol indique que vous devez remplacer tout verre de protection fêlé.**  
 Este simbolo indica que hay que 'reemplazar filtros en caso de rotura o desperfectos'.  
**Dette symbolet indikerer at alle ødelagte (sprukne) sikkerhetsglass må skiftes.**  
 Valaisinta el saa käyttää ilman suojalasia vioittunut suojalasi on vaihdettava uuteen ennen valaisimen käyttöön ottoa.

< Millimetres >



Avis Way Newhaven East Sussex BN9 0ED  
 T 0870 606 2030 F 01273 512 688 email: information@concordmarlin.com

