 


XTKR 62 / 0027 J

Disconnect from mains supply before replacing the fuse or the lamp.
 Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.
Débrancher le secteur avant de remplacer le fusible ou l'ampoule.
 Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.
Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.
 Koppla bort spänningen före byte av en säkring eller en lampa.



Switch Off
 Abschalten
Débrancher
 Desconectar
Uitschakelen
 Stäng av

Catalogue No. XTKR 62 fitted to all J type Marlin Spots.
 Catalogue No. 0027 J for connection to flexible cords and flex pendant luminaires.

Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.

CONNECTING TO FLEXIBLE CORDS

Unscrew the two cover screws and remove covers.

Pass cable through cable clamp and connect leads to respective terminals as shown.

Live (Brown) to terminal L
 Neutral (Blue) to terminal N
 Earth (Green/Yellow) to earth terminal

Locate cable clamp in adaptor and re-fit covers.

Tighten cable clamp screw ensuring it grips cable sheathing.


FITTING ADAPTOR IN TRACK

Insert adaptor in track (it will only go in one way round).

Turn adaptor slightly clockwise until the catch clicks in position.

Press catch to release adaptor from track.

NOTE: Maximum weight which may be hung from adaptor is 5 kilos (F max 50N).

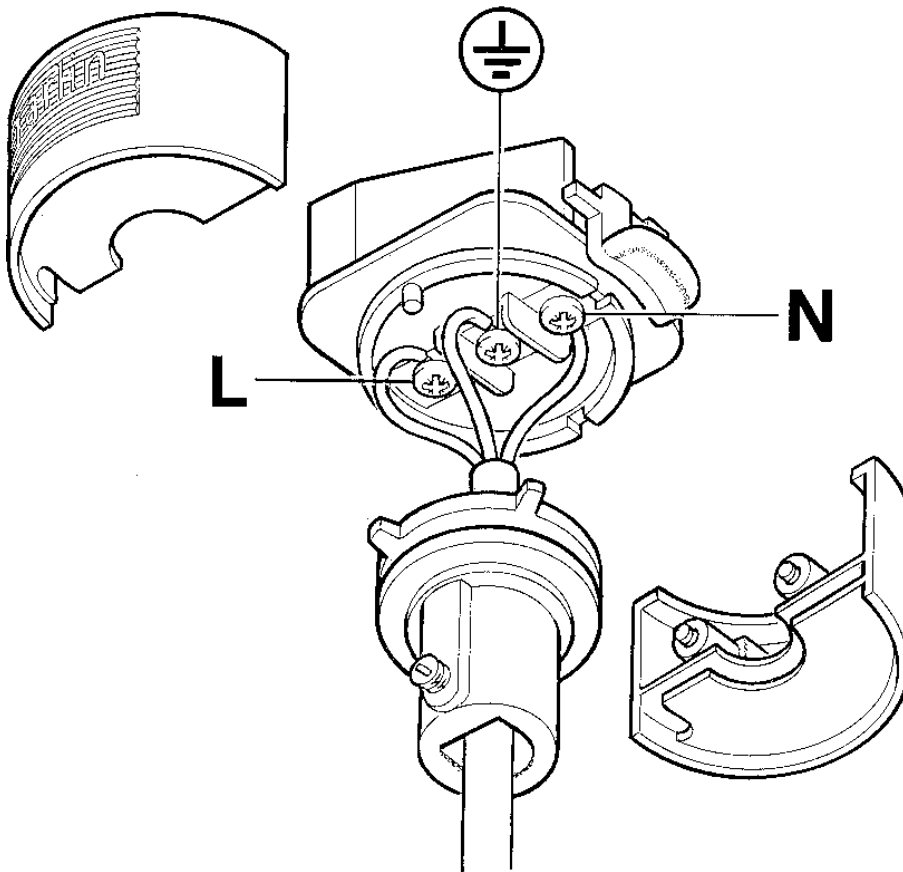

Suitable for use indoors
 Geeignet für Innenanwendung
Pour un usage interne
 Adecuada para uso en interiores
Geschikt voor gebruik binnen
 Lämplig för inomhusbruk



This Electrical Product
MUST be recycled.



< Millimetres >

Concord:marlin

Avis Way Newhaven East Sussex BN9 0ED
 T 0870 606 2030 F 01273 512 688 email: information@concordmarlin.com

