

Kometa 600 Dim/Dim Emergency




These products must be Earthed

IS1289A

2044623 2044624 2044625 2044626 2044627 2044628
 2044629 2044630 2044631 2044632 2044633 2044634
 4064670 4064672 4064674 4064676 4064678 4064680
 4065257 4065258 4065259 4065260 4065261 4065262

 Disconnect from mains supply before replacing the fuse or the lamp.
 Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.
Débrancher le secteur avant de remplacer le fusible ou l'ampoule.
 Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.
Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.
 Koppla bort spänningen före byte av en säkring eller en lampa.



Switch Off
 Abschalten
Débrancher
 Desconectar
Uitschakelen
 Stäng av

INSTALLATION PROCEDURE

Cut aperture in ceiling to accept back box of 555mm Dia.

Pass mains supply cable through cord grip and fix back box into aperture using the 6 mounting clips supplied as shown in Fig. 1.

Plastering may be completed to the back box, see Fig. 2.

Wire supplied plug-in connectors as shown in Fig. 3 and Fig. 4 and connect to sockets in housing.

Connect flying lead plug to battery box, see Fig. 5.







Align the three studs in back box with holes in housing and secure with nuts supplied.

Refer to label (A) and fit appropriate circular T5 lamp (B) into lampholder and retaining clips (G).

Locate the hole (F) in the reflector (D) and diffuser (C) assembly, over the stud in housing and secure with nut supplied. Ensure that the aperture for the lampholder is in the correct position.

Fit appropriate TCT lamp (E) as indicated on the label (A).

**NOTE: Total unit weight is:
 Kometa 600 = 9 Kgs.**

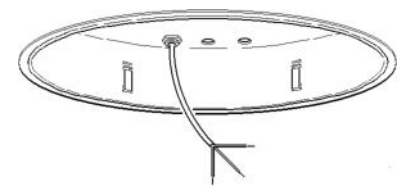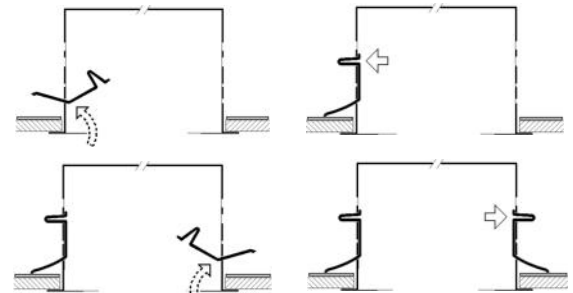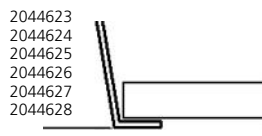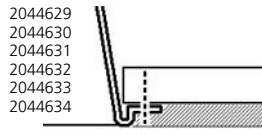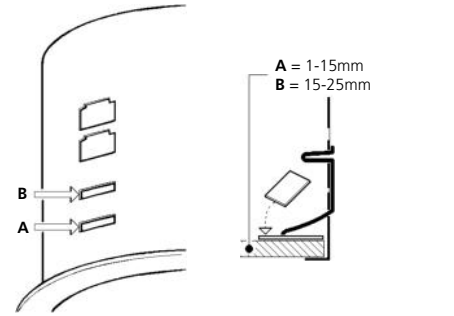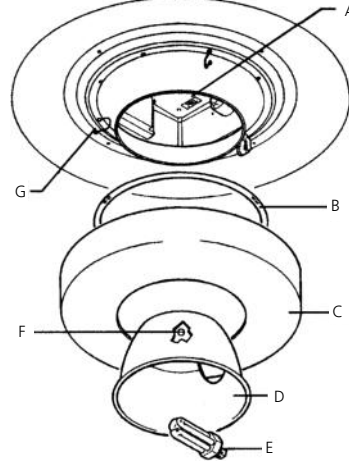

2

4 x 1.0mm² Min

L N L2

JAN	FEB	MAR	APR
MAY	JUN	JUL	AUG
SEP	OCT	NOV	DEC
2010	2011	2012	2013
2014	2015	2016	2017
2018	2019	2020	2021

Push Button Switch Dim (x2)

10 x 1.0mm² Min

1 x D1
 1 x D2
 1 x ⊕
 1 x N
 1 x L L3

OR

8 x 1.0mm² Min + 2 x Neutral Link

1 x D1
 1 x D2
 1 x ⊕
 1 x N
 1 x L L3

DSI Dim (x2)

10 x 1.0mm² Min

1 x DSI D1
 1 x DSI D2
 1 x ⊕
 1 x N
 1 x L L3

OR

8 x 1.0mm² Min + 2 x Neutral Link

1 x DSI D1
 1 x DSI D2
 1 x ⊕
 1 x N
 1 x L L3

10 x 1.0mm² Min

1 x L1 (TCT)
 1 x L2 (T5)
 1 x ⊕
 1 x N
 1 x L L3

Routine Testing

Testing should be carried out in accordance with the recommendations of BS5266.

1. A monthly functional test.

2. Twice yearly, a one hour test.

3. Every three years, a full three hour duration test.

The above tests assume a three hour system.

4. Batteries should be replaced when the luminaire no longer meets the 3 hours duration performance.

5. Testing could be performed by interrupting the fixed phase supply for the test duration, during which the luminaire should remain lit.

6. Ensure that the 'LED' is 'OFF' during 'Discharge Mode', and 'ON' during 'Charging Mode'.

7. Replace faulty lamps immediately.

To assist with this testing, a test card is included below.

If the charge indicator (LED) is unlit, this signifies a fault. To increase the chance of a fault being reported between monthly tests, it is desirable that staff are made aware of the purpose of the indicator.

This module should not be modified or repaired by any person other than those nominated by the manufacturer. ANY unauthorised modifications may render the module unsafe and will invalidate our warranty and conformance to any safety standards that may apply. The company will accept no responsibility for any modified modules, or for damage caused as a result of modifications.

All details are given for guidance only and do not constitute a contract. We reserve the right to change the characteristics of products without notice.

Test Record

Type.....	Location.....					
Month	Test	1st Year	2nd Year	3rd Year	4th Year	5th Year
	1. Functional					
	2. Functional					
	3. Functional					
	4. Functional					
	5. Functional					
	6. Functional					
	7. Functional					
	8. Functional					
	9. One Hour					
	Three Hour					
	10. Functional					
	11. Function					
	12. Functional					

Suitable for use indoors

Geeignet für Innenanwendung

Pour un usage interne

Adecuada para uso en interiores

Geschikt voor gebruik binnen

Lämplig för inomhusbruk

Replace any cracked protective shield.

Dieses symbol bedeutet, dass defekte Schutzgläser sofort ersetzt werden müssen.

Ce symbol indique que vous devez remplacer tout verre de protection fêlé.

Este símbolo indica que hay que 'reemplazar filtros en caso de rotura o desperfectos'.

Dette symbolet indikerer at alle deflagte (sprukne) sikkerhetglass må skiftes.

Valaisinta el saa käyttää ilman suojalasia vioitunut suojalasi on vaihdettava uuteen ennen valaisimen käyttöön ottoa.

