 



Diffuser
 FHE - 0046301 0046302 0046303 0046304 0057560 0057561 0057562 0057563
 FHE Dimming - 0057571 0057572 0057573 0057610 0057650 0057651 0057652
 FHO - 0046382 0046383 0046384 0046385 0057580 0057581 0057582 0057583 0057584 0057585
 FHO Dimming - 0057590 0057592 0057593 0057594 0057611 0057612 0057613 0057614
 Asymmetrical - 0046204 0046205 0046206 0046207
 Asymmetrical Dimming - 0057640 0057641 0057644
Interconnection
 FHE - 0057520 0057521 0057522 0057523 0057524 0057525 0057526 0057527
 FHO - 0057530 0057531 0057532 0057533 0057534 0057535 0057536 0057537 0057538 0057539
 Connect - 5057540 5057541 5057542 5057543

Disconnect from mains supply before replacing the fuse or the lamp.
 Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.
Débrancher le secteur avant de remplacer le fusible ou l'ampoule.
 Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.
Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.
 Koppla bort spänningen före byte av en säkring eller en lampa.




Switch Off
 Abschalten
Débrancher
 Desconectar
Uitschakelen
 Stäng av

Diffuser and Interconnection

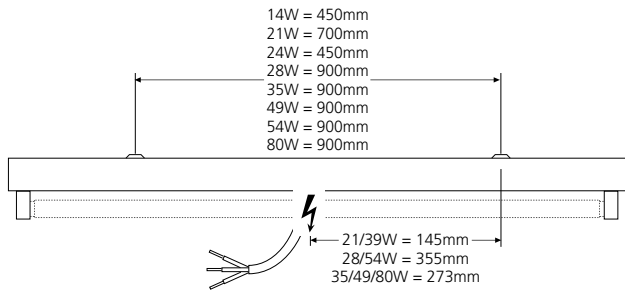


Diffuser


⚡ 230-240V~
 3 x 1.0mm² Min.
 P/L, N, ⊕
 1-10V ~
 2 x 1.0mm² Min.
 + & -

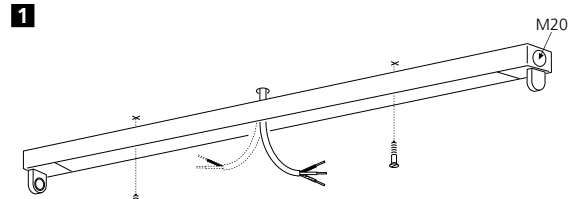


2 Diffuser

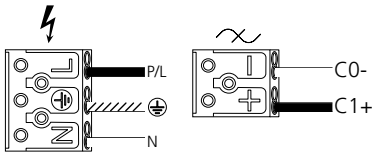

3

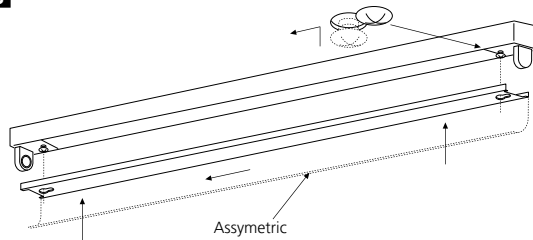

4 5046208
 5046210
 5046211
 5046212

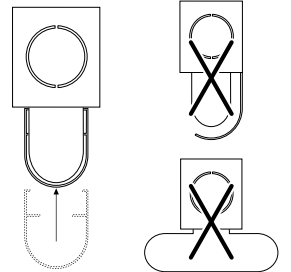

Interconnection
 5057541
 5057542
 5057543

