 


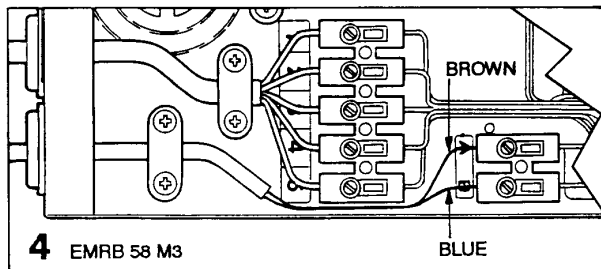
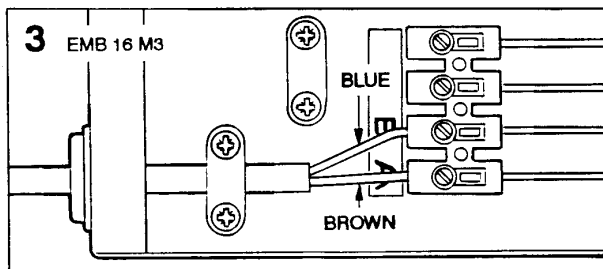


EML R4

**Disconnect from mains supply before replacing the fuse or the lamp.**  
 Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.  
**Débrancher le secteur avant de remplacer le fusible ou l'ampoule.**  
 Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.  
**Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.**  
 Koppla bort spänningen före byte av en säkring eller en lampa.

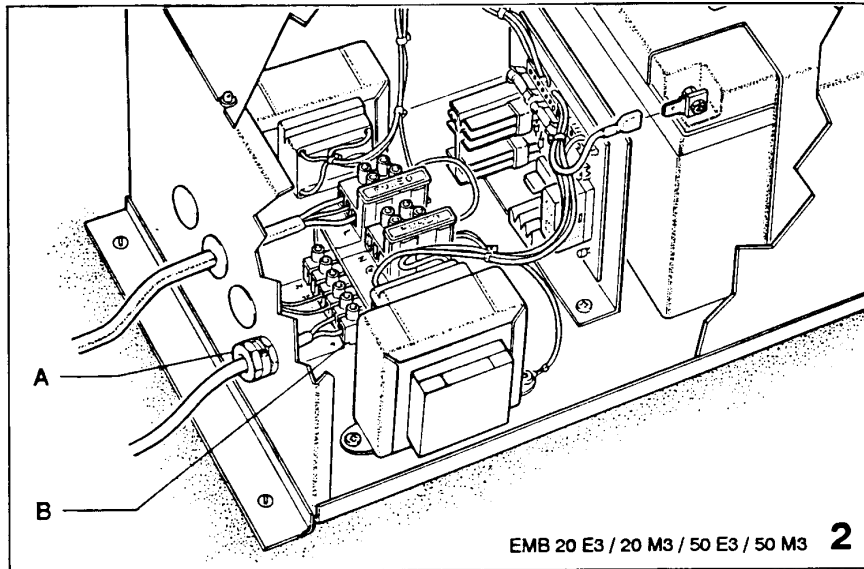

**Switch Off**  
 Abschalten  
**Débrancher**  
 Desconectar  
**Uitschakelen**  
 Stäng av

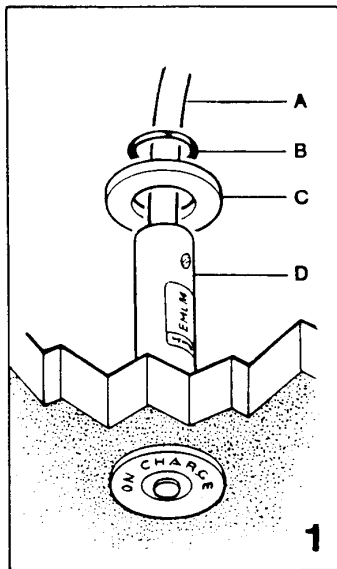


This LED indicator lamp accessory kit can be installed in any position within a 1.5 metre radius from auxiliary power module location.

**LED INSTALLATION - Fig.1**  
 Determine indicator lamp location and prepare a 15mm diameter hole.  
 Feed LED cable (A) through hole in mounting surface, through washer (C) and ring (B). Insert housing (D) in mounting hole and secure in position with washer and ring.


EMB 20 E3 / EMB 20 M3  
 EMB 50 E3 / EMB 50 M3 - Fig.2  
 Remove cover from power module, remove blanking plug from end panel and fit supplied cable clamp (A).  
 Remove existing LED leads from module terminal block (B).  
 Feed remote LED cable through cable clamp (A) into module.  
 Connect remote LED cable leads in module terminal block (B), BROWN to POSITIVE TERMINAL (+) and BLUE to NEGATIVE TERMINAL (-).  
 Tighten cable clamp screws and re-fit cover.

EMB 16 M3 - Fig.3  
 Pierce blanking plug and feed remote LED cable into housing and through cable clamp.  
 Connect leads in terminal block - BROWN to A and BLUE to B.

EMB 58 M3 - Fig.4  
 Pierce blanking plug and feed remote LED cable into housing and through cable clamp.  
 Connect cable leads in terminal block - BROWN to A and BLUE to B.

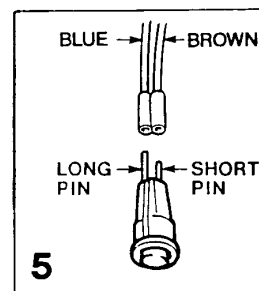

 **LED LAMP REPLACEMENT - Fig.5**  
 Connect BLUE lead to LONG pin, and BROWN lead to SHORT pin.



**Replace any cracked protective shield.**  
 Dieses symbol bedeutet, dass defekte Schutzgläser sofort ersetzt werden müssen.  
**Ce symbole indique que vous devez remplacer tout verre de protection fêlé.**  
 Este simbolo indica que hay que 'reemplazar filtros en caso de rotura o desperfectos'.  
**Detta symbolet indikerer at alle ødelagte (sprukne) sikkerhetglass må skiftes.**  
 Valaisinta ei saa käyttää ilman suojalasia violtuun suojalasi on vaihdettava uuteen ennen valaisimen käyttöön ottoa.

**Suitable for use indoors**  
 Geeignet für Innenanwendung  
**Pour un usage interne**  
 Adecuada para uso en interiores  
**Geschikt voor gebruik binnen**  
 Lämpig för inomhusbruk



This Electrical Product  
MUST be recycled.



< Millimetres >