 


Disconnect from mains supply before replacing the fuse or the lamp.
Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.
Débrancher le secteur avant de remplacer le fusible ou l'ampoule.
Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.
Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.
Koppla bort spänningen före byte av en säkring eller en lampa.



Switch Off
Abschalten
Débrancher
Desconectar
Uitschakelen
Stäng av

This luminaire is suitable for interior floor mounting.

Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.

Installation Procedures

Base Assembly - Fig. 1.

Pass the supply cable (E) through the baseplate (B), align the dimmer housing and baseplate slots (F&H) and insert the dimmer housing (A) in the baseplate (B). Align the fuse access hole (D) in the cover (C) with the fuseholder (G) and secure the cover in position. Fit an appropriate plug to the mains cable.

Fitting Lamp - Fig. 2.

Remove grill screw (A) and open grill (B). Insert and push one end of the lamp into a lampholder, locate the other end of lamp in opposite lampholder and release lamp.
IMPORTANT: Do not handle the lamp with bare fingers.

Tube Resistance - Fig. 3

To increase the sliding resistance of the inner tube, tighten the screws shown by arrows (B) with the allen key provided.

Setting Lamphousing - Fig. 3 & 4.

Adjust the lamphousing to the required position within the horizontal to vertical range as shown in Fig. 4. and tighten the clamp screws shown by arrows (A) in Fig. 3.

Height Adjustment - Fig. 4.

To adjust the height of the lamphousing between 108cm and 180cm pull the inner tube out of the base tube.

Operating Switch - Fig. 3.

Push the switch (C) down and release for ON or OFF. Push the switch (C) down and hold down, when required light intensity is obtained release the switch.

Fuse Replacement - Fig. 5.






Using a screwdriver turn the fuseholder anti-clockwise and gently depress to release the fuseholder. Replace fuse, insert fuseholder, depress and turn clockwise to lock.

Replacement Fuse = F3.15A / 250V.

WARNING: This luminaire must be earthed.

NOTE: This luminaire should be cleaned using warm soapy water and a soft cloth. Ensure that luminaire is switched off during cleaning.

Dispose of lamps in accordance with lamps manufacturer's instructions.

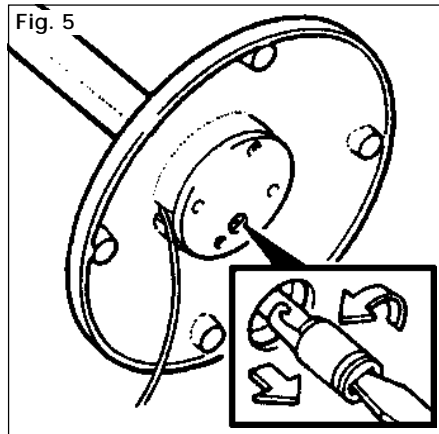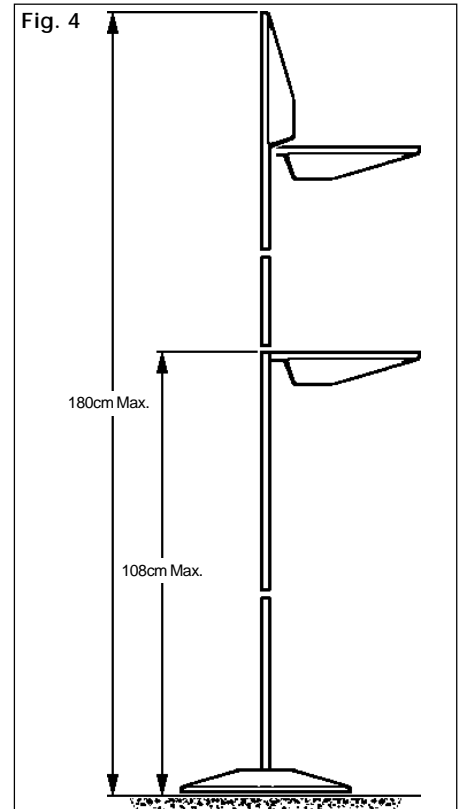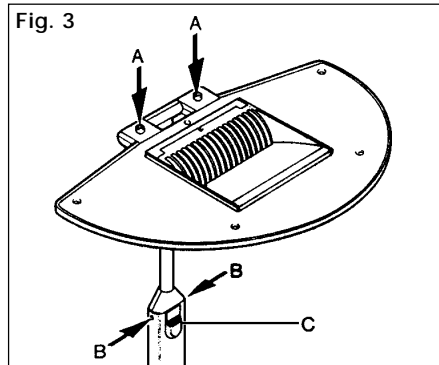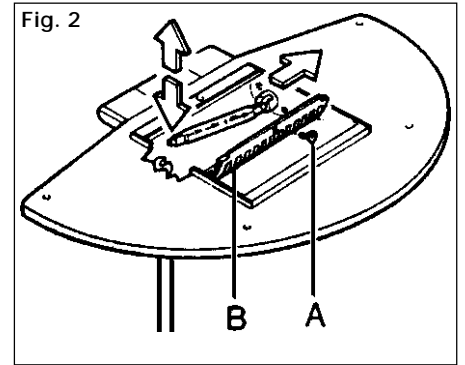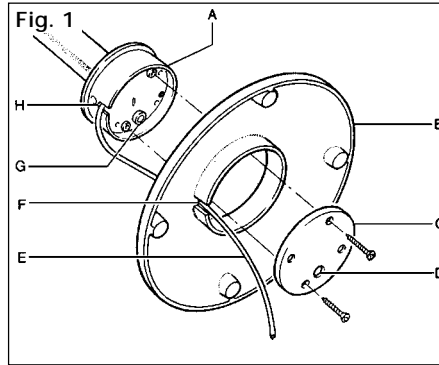

Suitable for use indoors

Geeignet für Innenanwendung

Pour un usage interne

Adecuada para uso en interiores

Geschikt voor gebruik binnen

Lämplig för inomhusbruk



Replace any cracked protective shield.

Dieses symbol bedeutet, dass defekte Schutzgläser sofort ersetzt werden müssen.

Ce symbole indique que vous devez remplacer tout verre de protection fêlé.

Este símbolo indica que hay que reemplazar filtros en caso de rotura o desperfectos.

Dette symbolet indikerer at alle ødelagte (sprukne) sikkerhetglass må skiftes.

Valaisinta ei saa käyttää ilman suojalasiasa vioitunut suojalasi on vaihdettava uuteen ennen valaisimen käyttöön ottoa.



< Millimetres >



This Electrical Product
MUST be recycled.



04.08

Concord

Avis Way Newhaven East Sussex BN9 0ED
 T 0870 606 2030 F 01273 512 688 email: information@concordmarlin.com

