 


DCA 3003

300W THD

Disconnect from mains supply before replacing the fuse or the lamp.
 Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.
Débrancher le secteur avant de remplacer le fusible ou l'ampoule.
 Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.
Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.
 Koppla bort spänningen före byte av en säkring eller en lampa.



Switch Off
 Abschalten
Débrancher
 Desconectar
Uitschakelen
 Stäng av

This luminaire is suitable for interior wall mounting.




Installation should be carried out by a suitable qualified person in accordance with good electrical practice and the appropriate national wiring regulations.

Switch off mains electrical supply before commencing installation.

Installation Procedure



Marking Fixing Holes - Fig. 1a.

Using the plastic wall plate as a template positioned over the supply cable and aligned horizontally/vertically, mark the fixing hole positions as indicated by the arrows. Drill suitable holes and insert wall plugs.

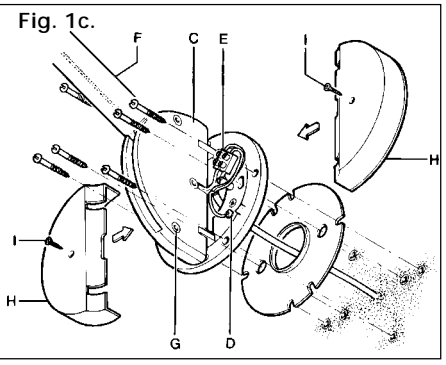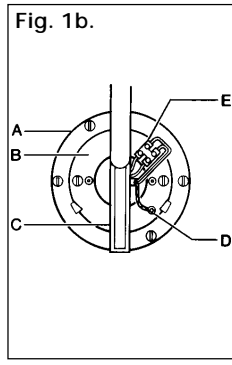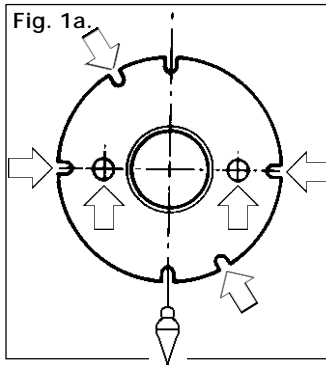

Fitting Wall Arm - Fig. 1b & 1c.

Pass the mains supply cable through the wallplate and mounting ring (B). Secure the outer ring (A) in position using suitable round headed screws. Secure the mounting ring (B) ensuring that the arm bracket face (C) is vertical.

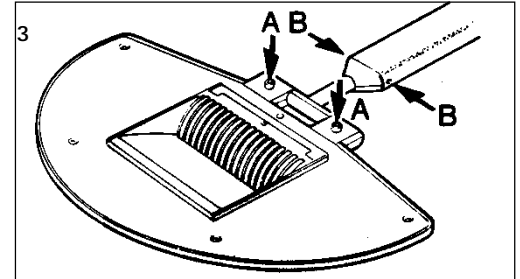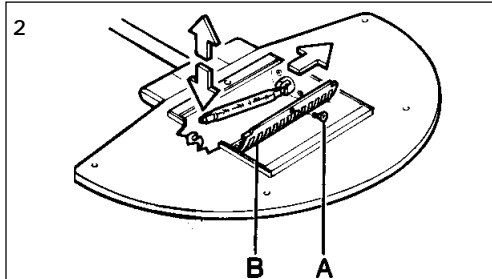

Arm Friction - Fig. 1c.

Check the up and down movement of the arm (F) and tighten the three socket screws (G) to increase friction if necessary.

Electrical Connections - Fig. 1b & 1c.


Connect the mains supply leads in the terminal block (E) and the earth lead to the earth terminal (D).

Fitting Covers - Fig. 1c.

Insert the covers (H) at a slight angle behind the arm bracket (C) and secure in position with screws (I).

Fitting Lamp - Fig. 2.

Remove grill screw (A) and open grill (B). Insert and push one end of lamp into lampholder, locate the other end of the lamp in opposite lampholder and release lamp.
WARNING: Do not handle the lamp with bare fingers.

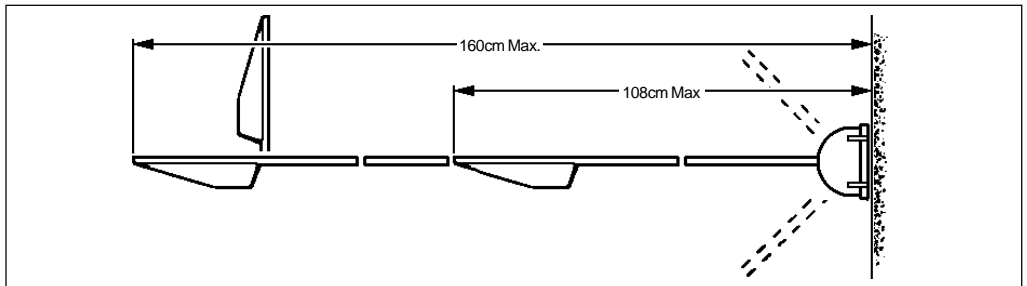

Lamphousing Arm - Fig. 3.

The lamphousing arm can be variably extended from 108cm to 160cm, and is adjustable up and down through 90 degrees.

Arm Sliding Resistance - Fig. 4.

To increase the sliding resistance of the inner arm, tighten the screws indicated by the arrows (B) with the allen key provided.

Setting Lamphousing - Fig. 3 & 4.

Adjust the lamphousing to the required position within the horizontal to vertical range shown in Fig. 3 and tighten the clamp screws as shown by arrows (A) in Fig. 4.

WARNING: This luminaire must be earthed.

NOTE: This luminaire should be cleaned using warm soapy water and a soft cloth. Ensure luminaire is switched off during cleaning.

Dispose of lamps in accordance with lamp manufacturer's instructions.

Suitable for use indoors

Geeignet für Innenanwendung
 Pour un usage interne
 Adecuada para uso en interiores
 Geschikt voor gebruik binnen
 Lämplig för inomhusbruk



Replace any cracked protective shield.

Dieses symbol bedeutet, dass defekte Schutzgläser sofort ersetzt werden müssen.

Ce symbol indique que vous devez remplacer tout verre de protection fêlé.

Este símbolo indica que hay que reemplazar filtros en caso de rotura o desperfectos.

Dette symbolet indikerer at alle ødelagte (sprukne) sikkerhetglass må skiftes.

Valaisinta ei saa käyttää ilman suojalasiasa vioitunut suojalasi on vaihdettava uuteen ennen valaisimen käyttöön ottoa.

< Millimetres >



This Electrical Product
 MUST be recycled.



04.08

Concord

Avis Way Newhaven East Sussex BN9 0ED
 T 0870 606 2030 F 01273 512 688 email: information@concordmarlin.com

