 


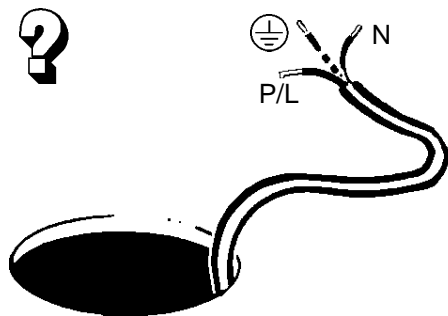
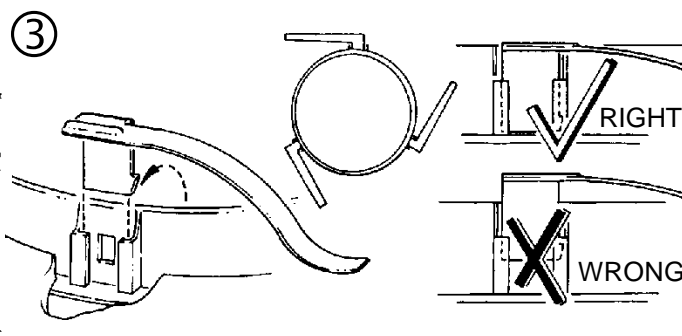
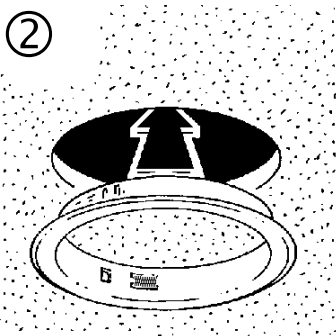


Disconnect from mains supply before replacing the fuse or the lamp.
 Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.
Débrancher le secteur avant de remplacer le fusible ou l'ampoule.
 Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.
Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.
 Koppla bort spänningen före byte av en säkring eller en lampa.


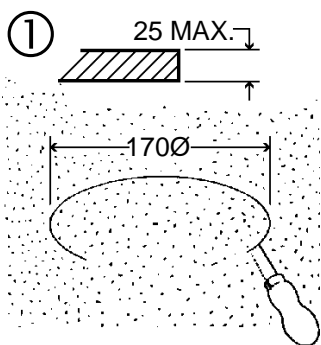


Switch Off
 Abschalten
Débrancher
 Desconectar
Uitschakelen
 Stäng av

2007581 2007612

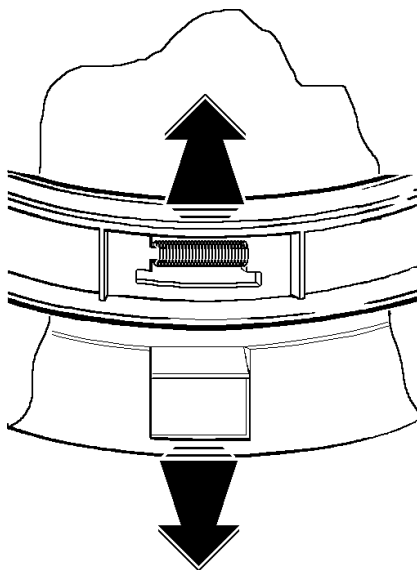

Hi-Spot 120 75 - 100W Max. E27	⇒	230/240V	
60W - 120W Max. Par 38 E27.	⇒	230/240V	
Hi-Spot 95 50 - 75W Max. E27	⇒	230/240V	
70W - 100W Max. Par 30 E27	⇒	230/240V	
.....			
70W Max HSE (SON-R) E27.	⇒	14085	⇒ 230/240V
.....			
Metalarc MP100 Par 38 100W Max. E27	⇒	14087	⇒ 230/240V

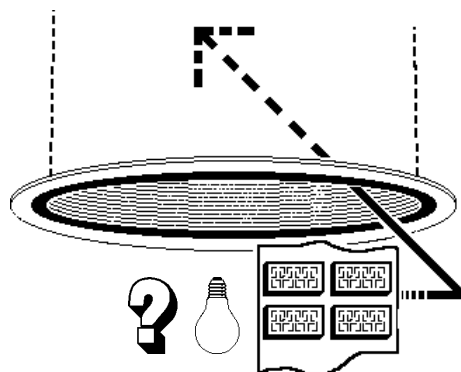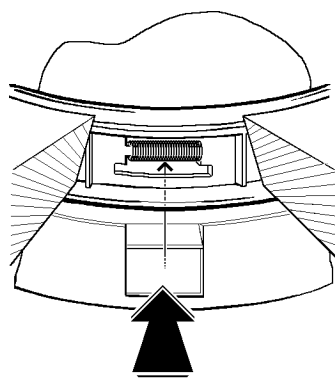

Suitable for use indoors
 Geeignet für Innenanwendung
Pour un usage interne
 Adecuada para uso en interiores
Geschikt voor gebruik binnen
 Lämpig för inomhusbruk



< Millimetres >