 




Disconnect from mains supply before replacing the fuse or the lamp.
Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.
Débrancher le secteur avant de remplacer le fusible ou l'ampoule.
Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.
Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.
Koppla bort spänningen före byte av en säkring eller en lampa.

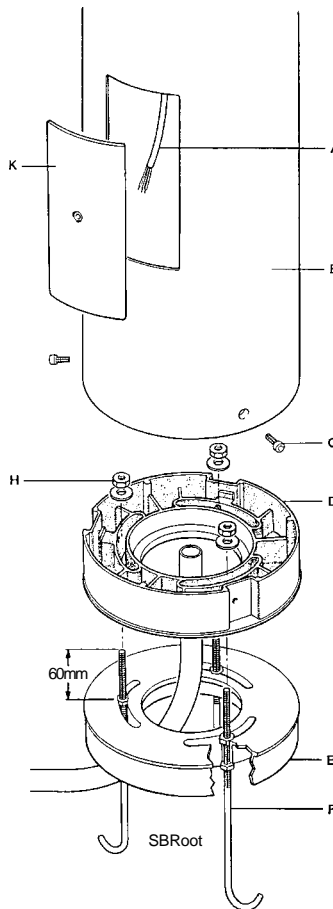

Switch Off
Abschalten
Débrancher
Desconectar
Uitschakelen
Stäng av

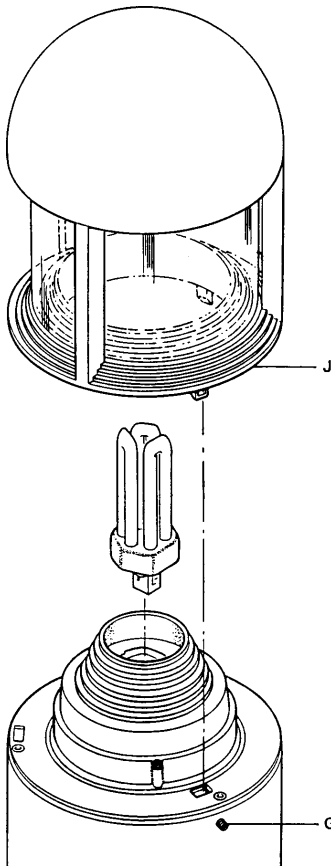

Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.

Switch off mains electrical supply before installation.

Installation Procedure

Remove post fixing screws (C) and base casting (D).

Direct Mounting:
 Place base casting (D) over mains supply cable/s and secure casting to a flat level mounting surface using suitable fixings.

Root Mounting:
 Assemble base mounting casting (E) and anchor rods (F) with supplied nuts. Allow rods to protrude 60mm out of casting as shown in illustration.

Place root assembly over mains supply cable/s in prepared hole, float cement in and around assembly ensuring casting (E) is flush and level with finished surface.

Locate base casting (D) over mounting studs and secure casting in position with supplied washers and nuts (H).

Connect mains supply cable/s to cutout baseplate (see Fig.2).

Place post (B) over base casting and secure in position with locking screws (C).




Remove access panel (K).

Fix nylon din rail clamp (N) to cut-out housing (P) and push assembly on post din rail (M). Fit appropriate fuse (R) in cover (S), see Fig. 1.

Pass lamp supply cable (A) through cut-out grommet and connect cable leads to their respectively marked terminals, see Fig. 2.

Connect earth lead (L) from fuse cut-out box to post din rail.

Loosen lamp housing fixing screws (G) and lift off lamp housing (J). Fit appropriate lamp, replace lamp housing and tighten fixing screws.
WARNING: Check that the ballast voltage/wattage tapping is correct, see below.

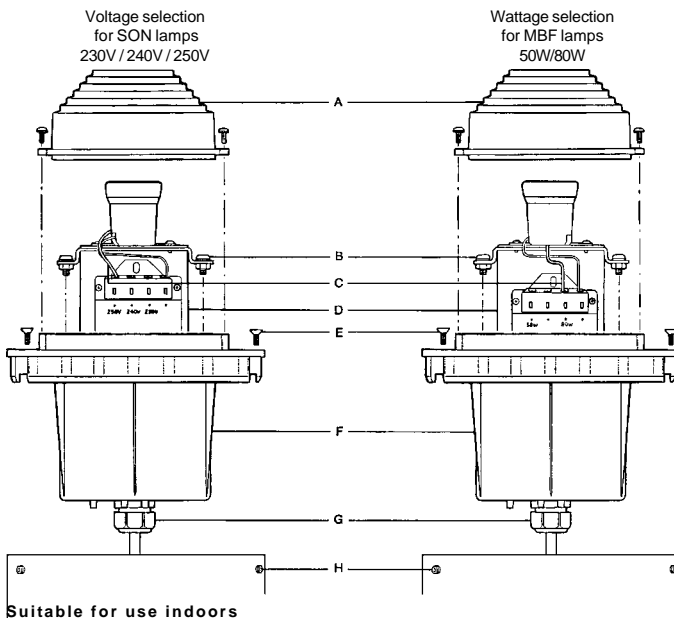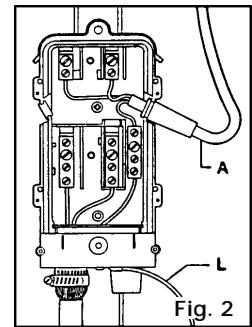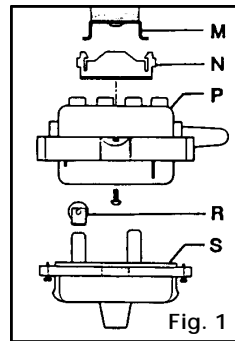

Voltage selection for SON lamps
230V / 240V / 250V

Wattage selection for MBF lamps
50W/80W

Checking Tapping

Remove cover (A) and check if tapping lead (C) is in the appropriate terminal.

Changing Tapping

Loosen screws (H), remove screws (E) and lift out housing (F).

Loosen cable gland nut (G).

Undo screws (B) and lift out gear assembly (F).

Remove tapping lead (C) and re-connect in appropriate terminal.

Fit gear assembly (D) in housing (F) and tighten cable gland nut (G).

Fit housing (F) in post and replace cover (A).

Suitable for use indoors
 Geeignet für Innenanwendung
 Pour un usage interne
 Adecuada para uso en interiores
 Geschikt voor gebruik binnen
 Lämplig för inomhusbruk

Replace any cracked protective shield.
 Dieses Symbol bedeutet, dass defekte Schutzgläser sofort ersetzt werden müssen.
Ce symbol indique que vous devez remplacer tout verre de protection fêlé.
 Este símbolo indica que hay que reemplazar filtros en caso de rotura o desperfectos.
Dette symbolet indikerer at alle ødelagte (sprukne) sikkerhetglass må skiftes.
 Valaisinta ei saa käyttää ilman suojalasina vioitunutta suojalasia on vaihdettava uuteen ennen valaisimen käyttöön ottoa.

< Millimetres >

This Electrical Product
MUST be recycled.



03.08