 


NEMB05E3

**Disconnect from mains supply before replacing the fuse or the lamp.**  
 Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.  
**Débrancher le secteur avant de remplacer le fusible ou l'ampoule.**  
 Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.  
**Voor het vervangen van lamp of zekerling, eerst netspanning uitschakelen.**  
 Koppla bort spänningen före byte av en säkring eller en lampa.



**Switch Off**  
 Abschalten  
**Débrancher**  
 Desconectar  
**Uitschakelen**  
 Stäng av

The control unit and associate luminaire have been designed for sustained emergency operation with a 3 hour duration.

Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.

Switch off mains electrical supply before commencing installation.

## INSTALLATION PROCEDURE

Determine mounting location for unit, adjacent to luminaire within the confines of the supplied 0.5 metre luminaire connection cable. **NOTE: Cable length of 0.5 metre must not be exceeded.**

Remove cover, fix unit to the mounting surface.

Pierce grommet (B), feed 3-core cable from UNSWITCHED MAINS SUPPLY through grommet and connect to the respectively marked terminals in fused 2A terminal block (C).


Release cable gland clamps, feed luminaire connection cables through and connect to the respectively marked terminals, secure cables.

**NOTE: Connection of luminaire cables MUST be made before connecting battery lead.**

Enter supply connection date on battery pack label (F).

Connect battery socket (D) and plug (E).

Re-fit cover.

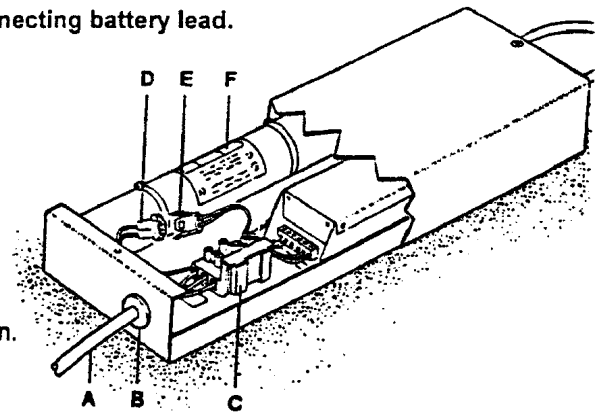

## TESTING

Switch on mains supply and check that LED charge indicator lamp is on.

Leave luminaire on continuous charge for 24 hours.

Simulate mains failure, and check that lamp operates for 3 hours. If full duration of 3 hours is not achieved, repeat charge cycle as battery packs may have discharged whilst in stock and will require conditioning.

**NOTE:** LED charge indicator lamp can be fitted remote from unit, either by incorporating into the luminaire, or by using EMLR4 accessory.

**WARNING:** If LED charge indicator lamp is not fitted or is incorrectly wired the luminaire will not light.

**WARNING:** DO NOT INSULATION TEST THIS UNIT.

**WARNING:** DISCONNECT BATTERY AND MAINS SUPPLY BEFORE INSTALLING OR SERVICING THIS UNIT.



**Replace any cracked protective shield.**

Dieses symbol bedeutet, dass defekte schutzgläser sofort ersetzt werden müssen.

**Ce symbol indique que vous devez remplacer tout verre de protection fêlé.**

Este simbolo indica que hay que 'reemplazar filtros en caso de rotura o desperfectos'.



**Dette symbolet indikerer at alle ødelagte (sprukne) sikkerhetglass må skiftes.**

Valaisinta el saa käyttää ilman suojalasia vioitunut suojalasi on vaihdettava uuteen ennen valaisimen käyttöön ottoa.

**Suitable for use Indoors**  
 Geeignet für Innenanwendung  
**Pour un usage interne**  
 Adecuada para uso en interiores  
**Geschikt voor gebruik binnen**  
 Lämpilg för inomhusbruk



This Electrical Product  
**MUST** be recycled.



< Millimetres >

# Concord:marlin

Avis Way Newhaven East Sussex BN9 0ED  
 T 0870 606 2030 F 01273 512 688 email: information@concordmarlin.com

© Concord Lighting Ltd.