 



4060362
4060363
4060364
4060365

Disconnect from mains supply before replacing the fuse or the lamp.
Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.
Débrancher le secteur avant de remplacer le fusible ou l'ampoule.
Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.
Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.
Koppla bort spänningen före byte av en säkring eller en lampa.



Switch Off
Abschalten
Débrancher
Desconectar
Uitschakelen
Stäng av

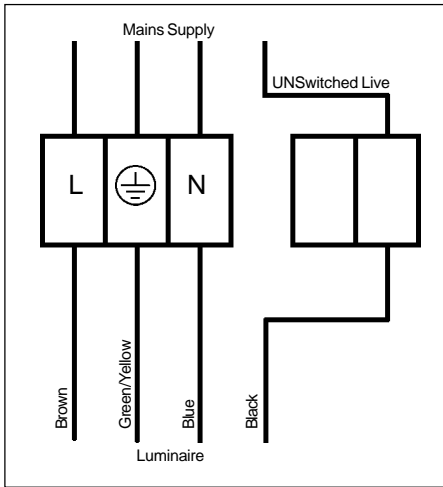

This pendant is suitable for interior ceiling mounting to a 50.8mm conduit box or directly to mounting surface.

Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.

Switch of mains electrical supply before commencing installation.

Installation Procedure

Rotate diffuser (P) anti-clockwise and remove.

Check rating marked on label (K) conforms with mains electrical supply.

Pass suspension wires (A) through washers (B) and mounting plate (C).

Pass mains supply cable/leads through mounting plate (C) and secure plate to conduit box or mounting surface using suitable screws.

Refer to wiring diagram and connect mains supply leads in terminal blocks (E) and (F).

Cut and prepare pendant cable to required length if necessary.

Pass pendant cable through cover (G) and connect cable leads in terminal blocks (E) and (F) ensuring cable is secured in cable clamp (D).

Pass suspension cables through cover (G) and push cover on mounting plate (C).

Push suspension wires through wire clutches (J) to tension. To release wires, depress button (see Fig. 1). DO NOT cut wires - cover wires with supplied sleeving (S) and locate in clips (T) on inside of spar. Tuck excess wire behind trim (H).

Fit appropriate lamps as indicated on label (K) by pushing firmly into lampholders.

Enter installation date on battery pack label (N).

Connect battery plug and socket (L) and (M).

Locate diffuser (P) on housing and rotate clockwise to lock.

NOTE: Luminaire is protected by a 3A fuse (R).

Testing

Switch on mains supply and check that the charge indicator lamp (N) is on.

Leave luminaire on continuous charge for 24 hours.

Simulate mains failure and check that lamp operates for 3 hours. If full duration of 3 hours is not achieved, repeat charge/discharge cycle as battery may have discharged in stock and will require conditioning.




Warning: Luminaire must be earthed.

Warning: Do not insulation test.

Warning: Do not switch off luminaire after installation, as unswitched supply must be maintained. If interruption to the supply is unavoidable, the batteries must be disconnected or damage may result.

NOTE: This luminaire should be cleaned by using warm soapy water and a soft cloth - ensure luminaire is switched off during cleaning.

Dispose of lamps in accordance with lamp manufacturers instructions.

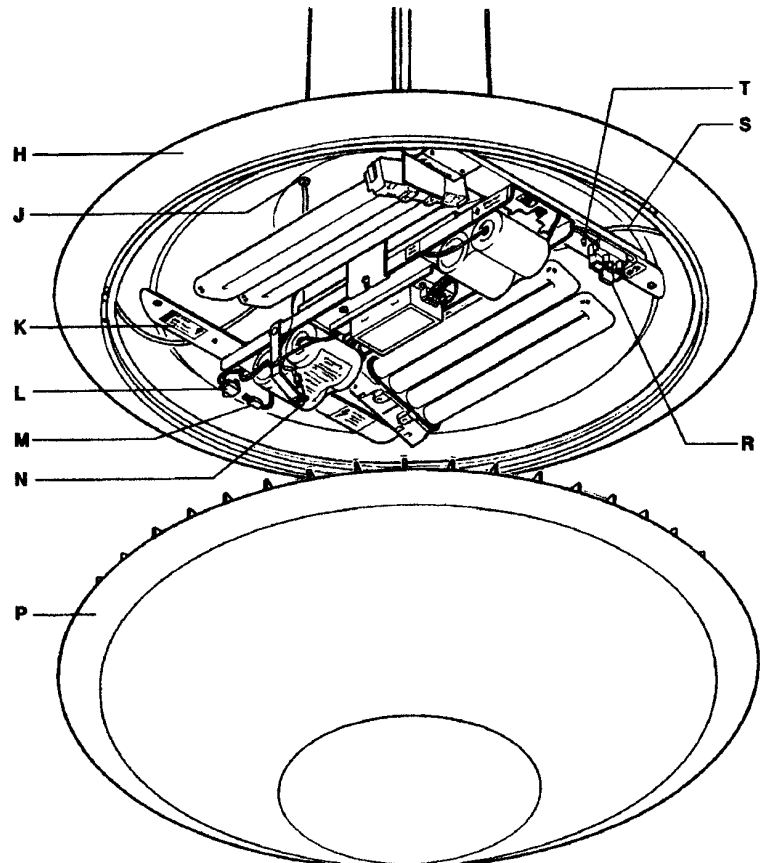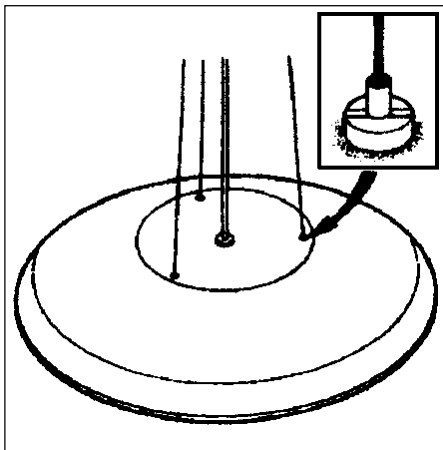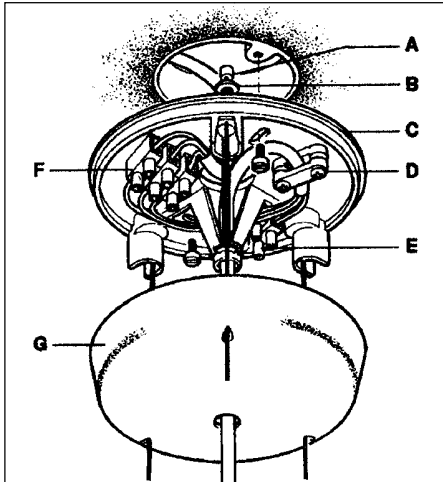

Routine Maintenance

Routine maintenance must be carried out in compliance with the requirements of BS5266:Part 1 - Emergency Lighting of Premises.

The following tests assume a three-hour system.

- Daily:**
1. Check that any recorded faults have been rectified.
 2. Check that the maintained emergency lamp is operative.
 3. Check that the charge indicator light is illuminated.
- Monthly:**
(Functional)
1. Simulate a mains failure and check that the emergency lamp illuminates and remains on for several minutes.
 2. After reverting back to mains supply check the charge indicator light is illuminated.
- Six Monthly:**
(1 Hour)
1. Simulate a mains failure and check that the emergency lamp illuminates and remains on for one hour.
 2. After reverting back to mains supply check the charge indicator light is illuminated.
 3. On restoring the mains supply the unit will require approximately 24 hours to recharge before becoming fully operational.
- Three Years:**
(3 Hours)
1. Simulate a mains failure and check that the emergency lamp illuminates and remains on for at least 3 hours.
 2. After reverting back to mains supply check the charge indicator light is illuminated.
 3. On restoring the mains supply the unit will require approximately 24 hours to recharge before becoming fully operational.

It is recommended that the battery packs and lamps are replaced every 4 years or sooner if the units performance fails to meet the above requirements. To maintain optimum unit performance, only approved replacement battery packs and lamps must be used.

All routine maintenance checks must be recorded on the unit Routine Test Record and must be made available for inspection at all times.

Installation and Commissioning Record

Luminaire Model Ref: _____ Location: _____
Installed By: _____ Date: _____
Commissioned by: _____ Date: _____
(Full Charge and Discharge Cycle)

Routine Test Record

Monthly Test	First Year		Second Year		Third Year		Forth Year		Fifth Year	
	Signed	Dated	Signed	Dated	Signed	Dated	Signed	Dated	Signed	Dated
Functional										
Functional										
Functional										
Functional										
Functional										
1 Hour Duration										
Functional										
Functional										
Functional										
Functional										
1 Hour Duration										
3 Hour Duration										

Suitable for use indoors

Geeignet für Innenanwendung

Pour un usage interne

Adecuada para uso en interiores

Geschikt voor gebruik binnen

Lämplig för inomhusbruk



Replace any cracked protective shield.

Dieses symbol bedeutet, dass defekte Schutzgläser sofort ersetzt werden müssen.

Ce symbol indique que vous devez remplacer tout verre de protection fêlé.

Este simbolo indica que hay que 'reemplazar filtros en caso de rotura o desperfectos'.

Dette symbolet indikerer at alle ødelagte (sprukne) sikkerhetsglass må skiftes.

Valaisinta el saa käyttää ilman suojalasia vioittunut suojalasi on vaihdettava uuteen ennen valaisimen käyttöön ottoa.



< Millimetres >



This Electrical Product
MUST be recycled.



01.08

Concord

Avis Way Newhaven East Sussex BN9 0ED
T 0870 606 2030 F 01273 512 688 email: information@concordmarlin.com



© Concord Lighting Ltd.