 


2025716 2025717

Disconnect from mains supply before replacing the fuse or the lamp.
 Vor dem Einsetzen der Sicherung oder der Lampe Spannungsfreiheit herstellen.
Débrancher le secteur avant de remplacer le fusible ou l'ampoule.
 Desconectar del suministro de la red, antes de realizar la sustitución del fusible o de la lámpara.
Voor het vervangen van lamp of zekering, eerst netspanning uitschakelen.
 Koppla bort spänningen före byte av en säkring eller en lampa.














Switch Off
 Abschalten
Couper le connectar
 Desconectar
Uitschakelen
 Stäng av


NO DIMMERS



NO INSULATION

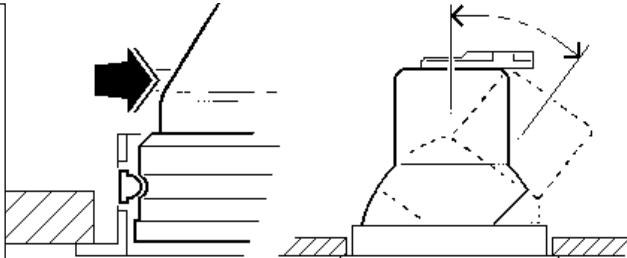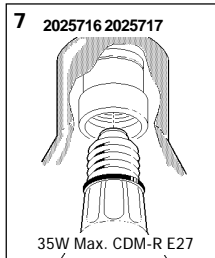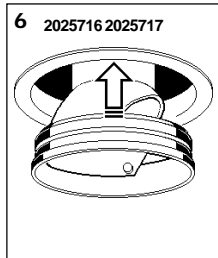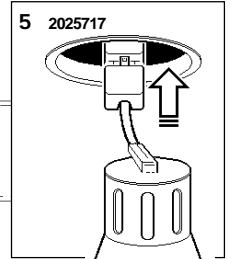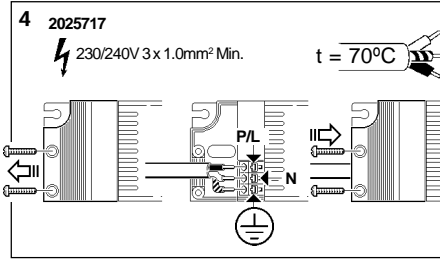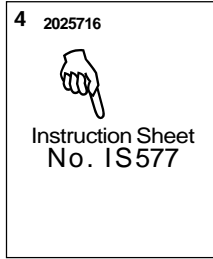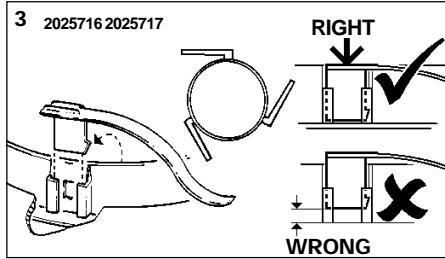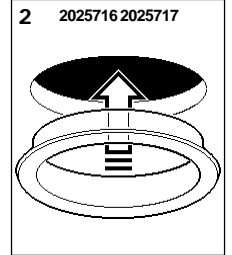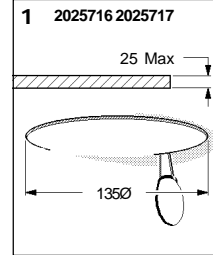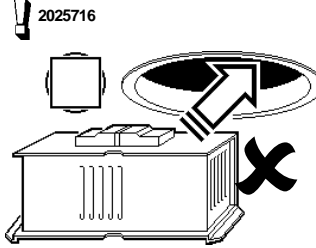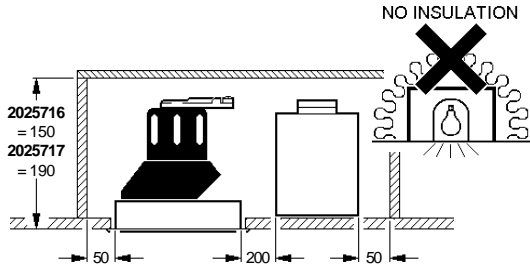


Accessories.....

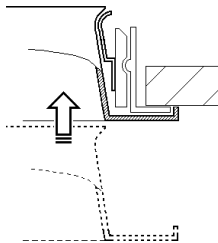

- ✓ Decorative Trim
2017456 2017457 2017458 2017459
- ✓ Shallow Ring
2017460 2017461 2017462 2017463 2017464
- ✓ Glow Ring
2017465 2017466 2017467 2017468 2017469 2017470
- ✓ Kick Reflector
2017478 2017479 2017480
- ✗ Slot
2017481 2017482 2017483
- ✗ Pinhole
2017471 2017474 2017476 2017473 2017475 2017477

 Suitable for use indoors
 Geeignet für Innenanwendung
Pour un usage interne
 Adecuada para uso en interiores
Geschikt voor gebruik binnen
 Lämpig för inomhusbruk



< Millimetres >