
 


FEH  These products **MUST** be **EARTHED**

Installation Instructions for: **2881447 2881094 2831066 2881129 2881041 2881130**

Safety

Follow these instructions carefully to ensure safe and reliable operation. Isolate mains supply before insulation, maintenance or replacing the lamp. Follow the appropriate national wiring regulations, if in any doubt contact a qualified electrician.

 Disconnect from mains supply before installation, maintenance or replacing the lamp.

Lamps reach maximum temperatures rapidly. Take care when adjusting, relamping or cleaning.

Sylvania accepts no responsibility for modified products or for the effects of cleaning solvents or for the accumulation of dust or dirt. The products must be installed in accordance with these instructions. FEH must not be modified. Any modification may render the product unsafe. FEH must not be covered with any heat insulating material. Air flow around this fitting must not be restricted. Note that the minimum distance to adjacent surfaces is marked on the product label (↔). Take care that the safety glass is not scratched or damaged. Replace safety glass immediately when scratched, damaged or after lamp shattering.

Lamp disposal

Dispose of defective lamps in accordance with the manufacturers' recommendations. It is the users responsibility to ensure that the lamp disposal is carried out in accordance with local regulations.

Cleaning

Switch off the mains supply. The fitting and lamp can quickly become hot. Ensure that both have cooled adequately before cleaning the fitting. Use only a soft damp cloth and soapy water on the outside. The reflector and lamp must only be cleaned with a soft cloth and alcohol.

Mounting

 
 
 
 
 
 
FEH floodlights must only be mounted in a fixed horizontal position.

Power Connection

Fixture must be connected to an individual fused circuit.

1. Use 8-13mm Dia. 3 core cable for installation
2. Remove wiring box cover.
3. Pass 3 core cable through cable entry gland 4 (gland nut, skid washer and gland ring)
4. Tighten the gland nut to make the unit water-tight and provide cable restraint.
5. Replace wiring box cover.
6. After completing the installation note the suppliers name, address and purchase date, then hand this instruction sheet to the person responsible for lighting maintenance.

Mounting

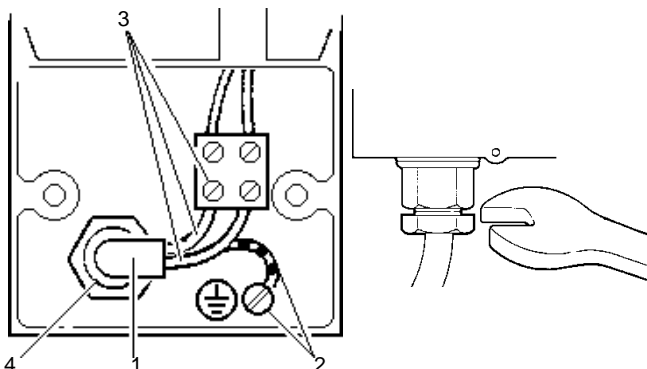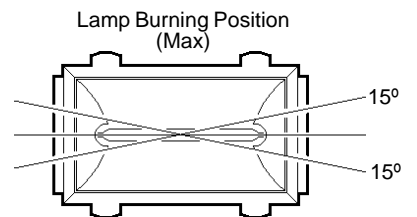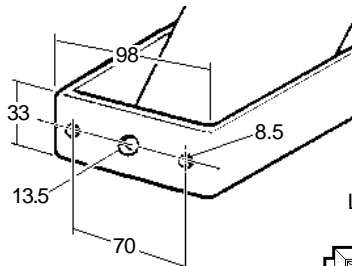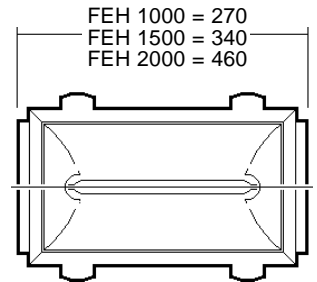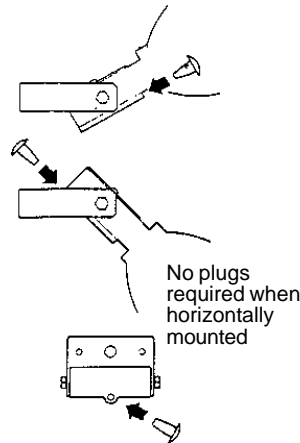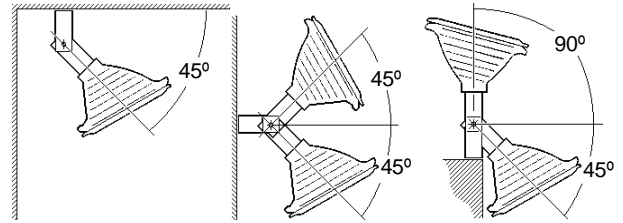

Installation of lamp(R7s) 2881447 2881094

1. To open floodlight, loosen (but do not remove) the four winged nuts. Lift up the two winged nuts on the top and carefully let down the front cover.
2. Do not touch the lamp with bare hands! Fingerprints subsequently burn into the quartz surface and reduce the lamp life. Install the lamp.
3. Re-tighten the wing nuts.

Installation of lamp(CFL/TC-TE) 2831066 2881129 2881041 2881130

1. To open floodlight, loosen (but do not remove) the four winged nuts. Lift up the two winged nuts on the top and carefully let down the front cover.
2. Push lamps into the lampholders.
3. Re-tighten the wing nuts.