

FIG. 1


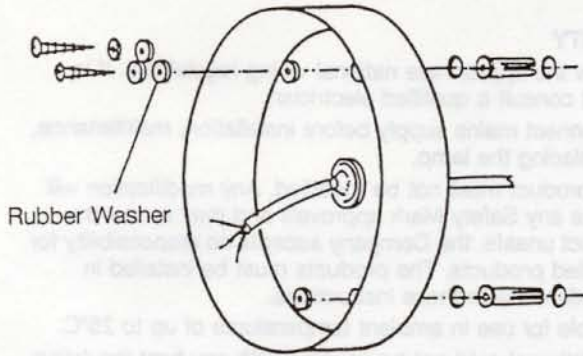


FIG. 2

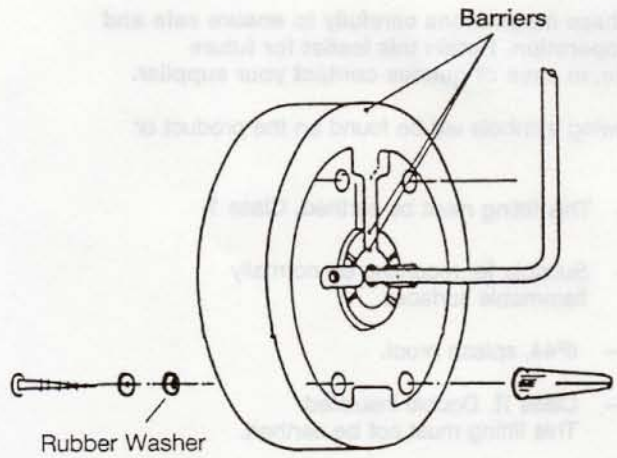

Note: Carefully cut & remove barriers to accommodate mains cable ensuring there are no sharp edges and the cable is not trapped.

FIG. 3


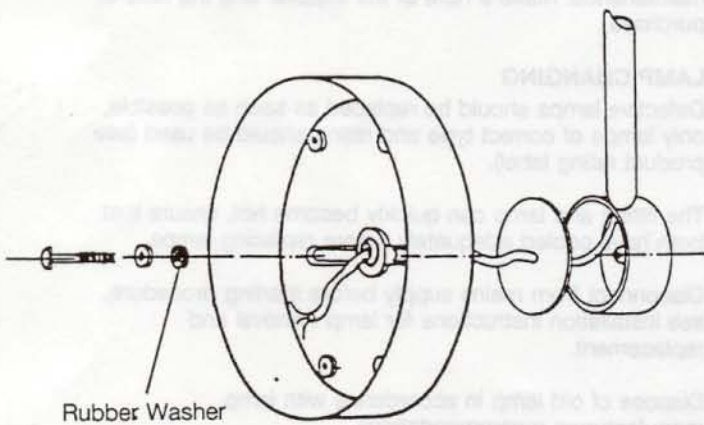


FIG. 4
(not Norway)

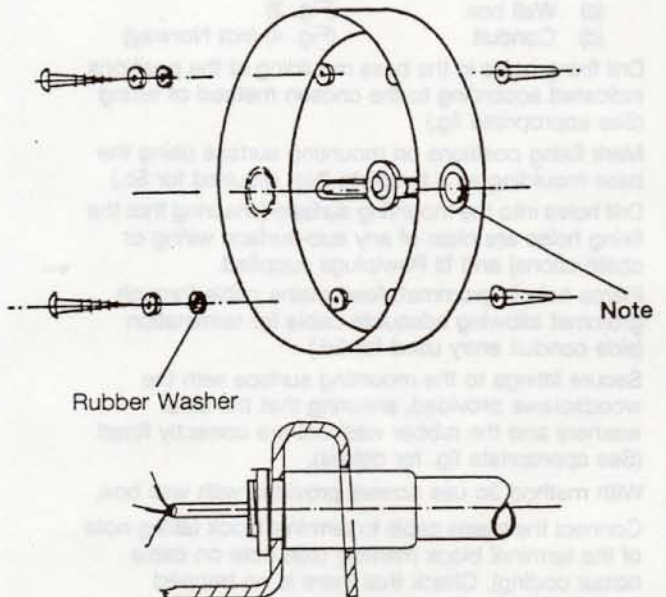

Note: Drill appropriate size holes to accommodate system to be utilised. For through wiring repeat detail where indicated.